



Connecting Shuttle S / L / M-receiver by wire

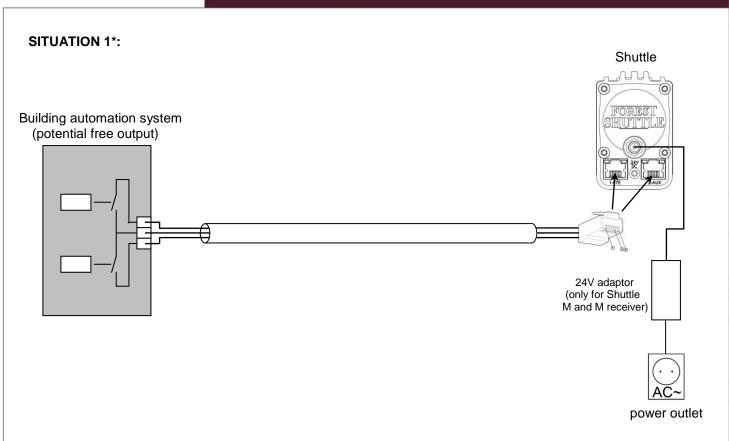

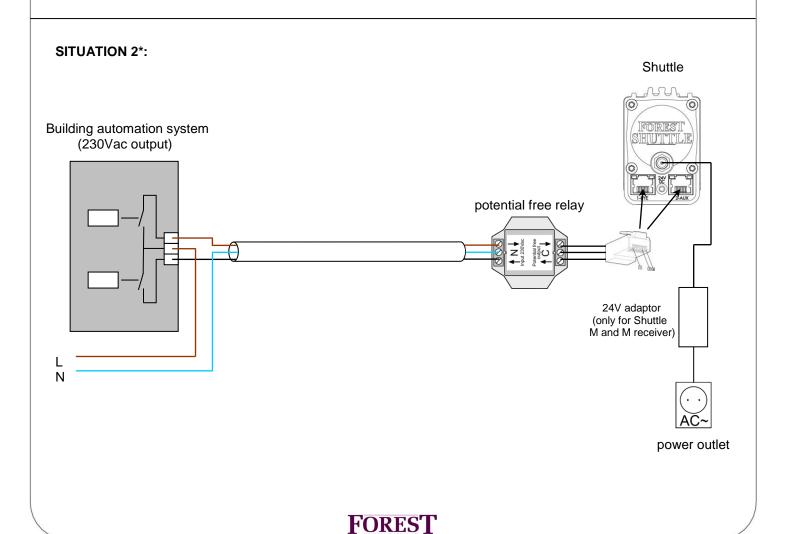



Connecting Shuttle S / L / M-receiver by wire

Situation 3*: Building automation system (230Vac output) potential free relay adaptor power outlet

^{*} The motor must be installed by an installer who is qualified in motorized systems. Installation must be done according to local regulations